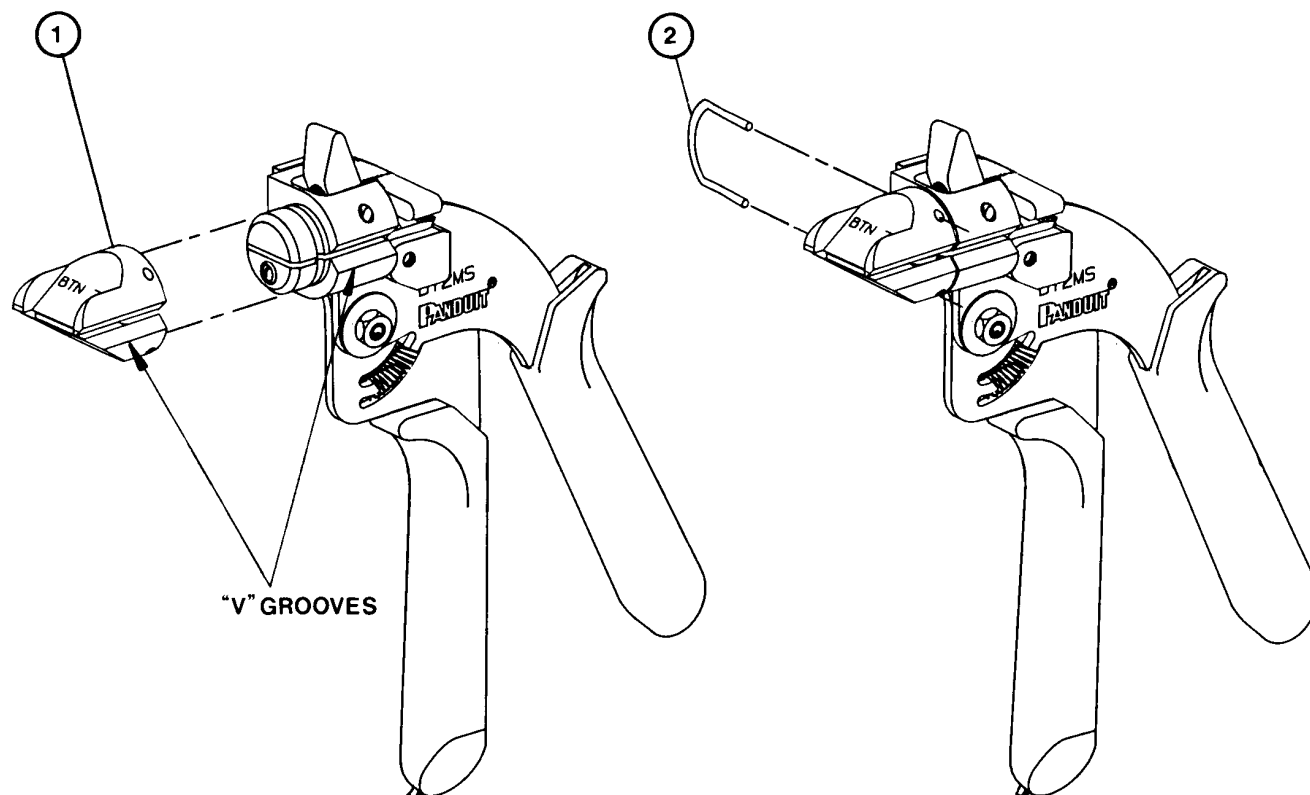


**INSTALLATION AND ASSEMBLY INSTRUCTIONS**

© Panduit Corp. 1996

**CONTENTS**

<u>ITEM</u>	<u>QTY</u>	<u>DESCRIPTION</u>
1	1	BT2N75 NOSE
2	1	SPRING CLIP

**INSTALLATION OF BT2N75 NOSE****WARNING:** SAFETY GLASSES MUST BE WORN DURING THE INSTALLATION OF THIS ITEM.

1. Slide the BT2N75 Nose 1 onto the tool so that the "V" grooves are aligned.
2. Hold the nose on the tool while inserting and attaching the spring clip 2 on the side of the nose opposite the "V" groove.
3. Carefully tap the spring clip in until it is flush with the side of the nose.